

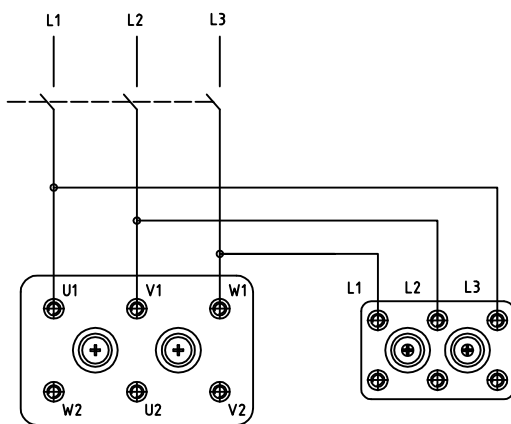
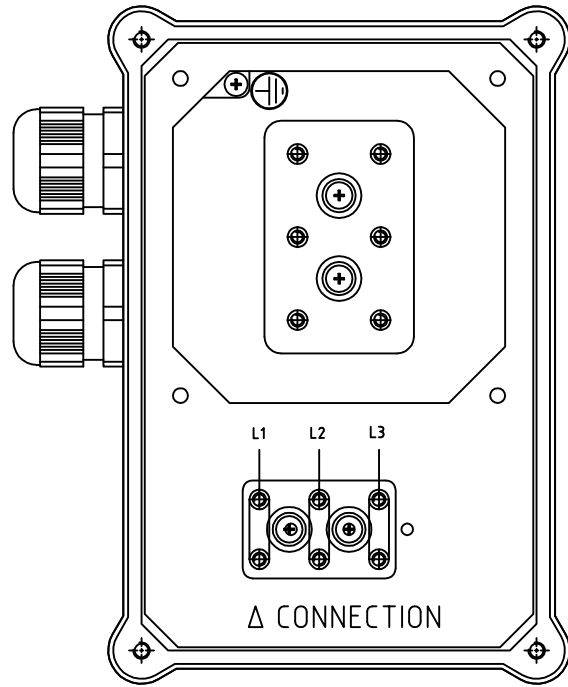


THREE-PHASE MOTOR CONNECTION DIAGRAMS - AC BRAKE

For the scheme relating to the connection of the motor, refer to the user manual

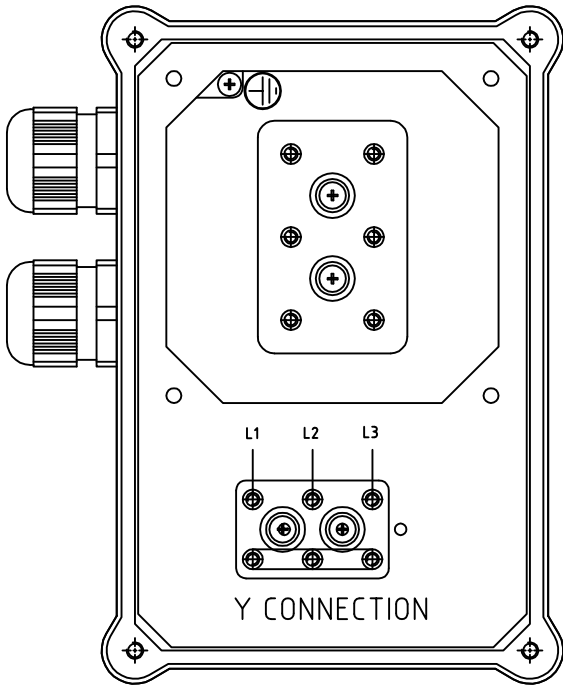

contextual power supply

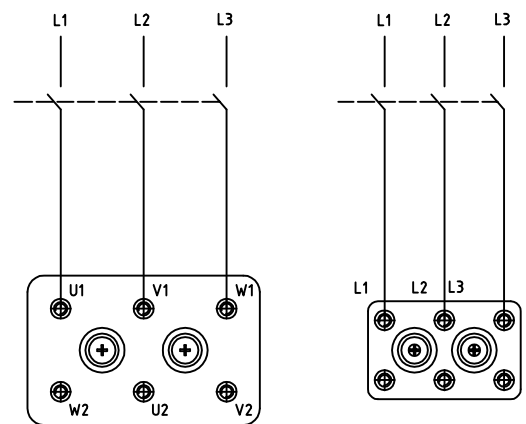

separate power supply